

# INSTALLATION INSTRUCTIONS – XCP LIGHT BAR REPLACEMENTS

Document: CI355X01R0

Date: 8/9/2010

Created by: DLD


DCR#: 10-171

## ⚠ CAUTIONS

- 1) To avoid the possibility of electrical shock, turn off power supply before installation or servicing.
- 2) Nominal power of each light bar: Maximum 67.2W
- 3) Value of Tc: 75°C


1. Remove the trim frame by loosening the four screws that secure it to the fixture.

FIGURE 1:

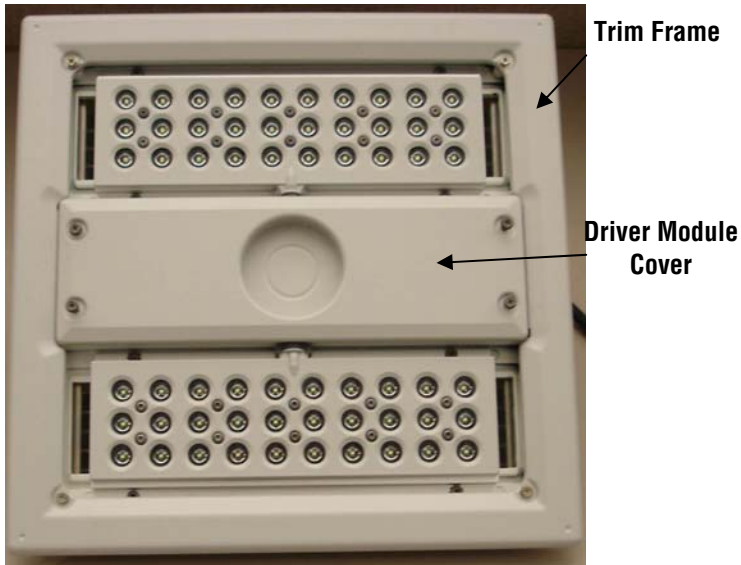


2. Remove the driver module cover by loosening its 4 self-retaining screws, and allow it to hang by its hinge.

FIGURE 2:

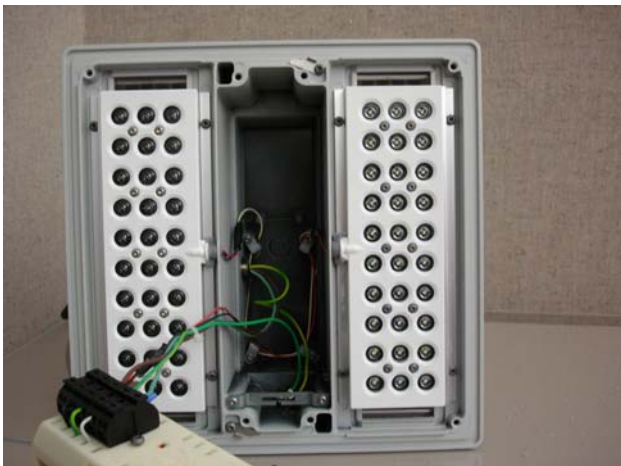


3. Disconnect light bar connector by lifting the small tab on the outside of the connector to release the catch.

FIGURE 3:

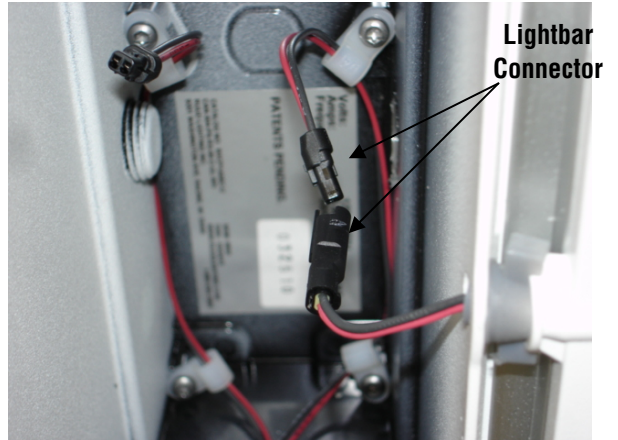

4. Remove the light bar that is going to be replaced by removing the four screws on the light bar's heatsink, and then by gently pulling the light bar out from the fixture housing.

FIGURE 4:

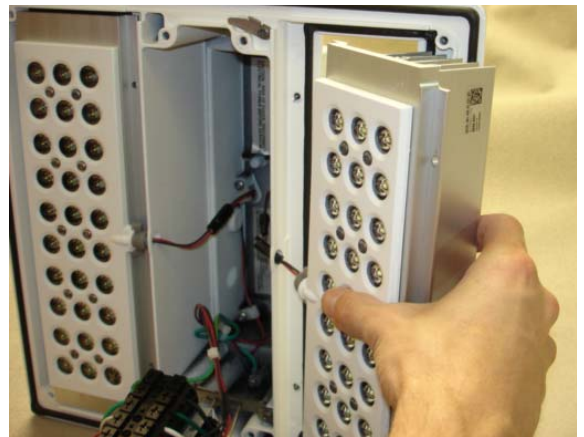

5. Return the old light bar to the manufacturer.
6. Feed the connector of the new light bar into the luminaire and connect to the male end.
7. Fit the new light bar into the fixture opening by angling it in so that the lightbar grommet lines up with the opening in the fixture.
8. Secure the new light bar's heatsink to the fixture with four screws (starting with the two screws closest to the inside of the fixture).